


AX Series Fire Alarm Control Panels

Controls & Indications [AX SERIES FIRE PANELS]

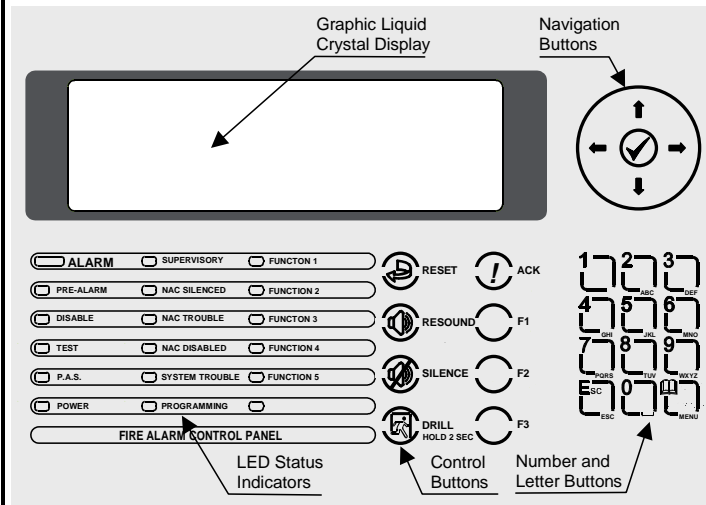

The panels may be fitted with separate zone fire indicators comprising of 100 or 200 red indicators – these show the zones in a fire alarm condition. In addition, the panels may be fitted with separate indications showing the location of fire alarms in a pictorial display (graphic diagram).

Graphic Display

The graphical display provides detailed information of the source of fire alarm, supervisory, trouble and warning conditions.

Under normal conditions the panel display shows the Time, Date and "Normal Panel Operation".

It also shows menus for use when inspecting or programming the operation of the panel. Level 2 Access is required for Ack, Reset, Silence, Re-sound & Drill buttons and for User Menu functions.

Refer to Installation and Operating Manual (682-001 or 682-010) for full operating instructions.

The system shall be inspected, tested and maintained in accordance with the recommendations outlined in NFPA72. The recommendations provide for weekly, monthly, quarterly, bi-annual and annual inspections/tests.

For service and maintenance contact:

NAME: _____

ADDRESS: _____

TEL: _____

Navigation Buttons

- Press to scroll through Menu Options. Press to display more information.
- Press to scroll through menu Options. Press to scroll through lists of zones or devices.
- Press to confirm entry of numeric or letter information entry.
- Press to confirm selection of a menu option.
- Press to change some of the configuration options.

Number Buttons

- Used to enter numbers or letters.
- Press to return to a previous menu. Press to exit the menu functions and return to the normal display.
- Press to show or return to Level 1 or Level 2 Menu Functions. Main User functions are VIEW, TEST, DISABLE & ENABLE.

LED Status Indicators

Flash then turn on steady when event is acknowledged.

- RED** Separate LED Indicators show the presence of a fire alarm condition .
- YELLOW** Indicate other system operating conditions including Supervisory, Trouble, Test and Disablement conditions.
- GREEN** Indicates the presence of power to the system – if flashing, indicates that the panel is running on battery standby power.

Control Buttons Level 2 operation can be enabled using a key-switch (if fitted) or by entry of a pass-code.

- Reset:** Press to reset the panel from a latched condition.
- Ack:** Press to acknowledge an event and silence the internal buzzer.
- Silence:** Press to silence the bells.
- Resound:** Press to re-sound the bells.
- Drill:** Press to initiate a manual evacuation and sound the alarms.

Function Buttons Write configured operation in the box for each function.

	F1	
	F2	
	F3	

User Function Indicators

Write configured operation in the box for each function.

FUNCTION 1	
FUNCTION 2	
FUNCTION 3	
FUNCTION 4	
FUNCTION 5	