




**SILENT  
KNIGHT**

## Model IFP-50 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-50 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72. Refer to Installation Manual P/N 151302.

Operation	Task to Perform
Silence Alarms and Troubles	Press  then enter a code if prompted. Silence LED will light.
Reset Alarms	Press  then enter a code if prompted.
Acknowledge Alarms and Troubles	Press  then enter a code if prompted. When the Alarm or Trouble is acknowledged an A will appear in the annunciator display as shown Below. 
View Alarms and Troubles	Press the  or  button to view Alarms and Troubles.
Conduct a Fire Drill	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select System Tests.</li> <li>3. Enter code if prompted, then press  to select Fire Drill.</li> <li>4. Press  to start the fire drill.</li> <li>5. Press  to end the fire drill.</li> </ol>
View a Points Status	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Point Functions.</li> <li>3. Enter code if prompted, then press  to select Point Status.</li> <li>4. Select the module the device is located on by using the  or . Then press .</li> <li>5. Enter the point number.</li> </ol>
Check Detector Sensitivity	<ol style="list-style-type: none"> <li>1. Follow steps 1 through 5 for viewing a point status.</li> <li>2. Press  to view detector sensitivity.</li> </ol>
Set Time and Date	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Set Time &amp; Date. Enter a code if prompted</li> <li>3. Make changes in the fields on the screen as necessary.</li> <li>4. Press  if you wish to keep the changes.</li> <li>5. Press  to set the entered time and date.</li> </ol>
Enable / Disable a Point	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Then press  to select Point Functions.</li> <li>3. Enter code if prompted, then press  to select Disable / Enable Pt.</li> <li>4. Select the module the point is located on by using the  or . Then press .</li> <li>5. Enter the point number.</li> </ol>
View Event History	<ol style="list-style-type: none"> <li>1. Press  to access Main Menu, then enter a code if prompted.</li> <li>2. Press  to select Event History.</li> <li>3. Press the  or  to view events in the history buffer.</li> </ol>
For Service call:	

Cut Along the Dotted Line

Cut Along the Dotted Line